



What Is Required To Operate The 2128P UHF RFID Reader:

The 2128P UHF RFID Reader requires the [2128-CRD-03-KIT](#) in order to charge the reader.



Reader Box Contents:



Battery



2128P UHF RFID Reader

Order:

- [2128P-EX1](#) (ETSI, No Imager)
- [2128P-AX1](#) (FCC, No Imager)
- [2128P-ES1](#) (ETSI, 2D Imager)
- [2128P-AS1](#) (FCC, 2D Imager)


Cradle Box Contents:



World Traveller Power Supply



Mini USB Cable

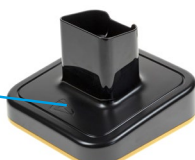

Docking Cradle

Order:

- [2128-CRD-03-KIT](#)